

DTM SHRINK BOOT RECOMMENDATION*


Position	Pin Side / Std Receptacle	Socket Side E007
2	204W511-25-0	202A111-25-0
3	202K111-25-0	202K111-25-0
4	202K232-25-0	202A111-25-0 or 202K111-25-0
6	202K232-25-0	202K232-25-0 Remove 1 Lip
8	202K232-25-0	202K232-25-0
12	202K232-25-0	202K232-25-0

DT SHRINK BOOT RECOMMENDATION*


Position	Pin Side / Std Receptacle	Socket Side E008
2	204W511-25-0	202K111-25-0
3	202K232-25-0	202K232-25-0 Remove 1 Lip
4	202K232-25-0	202K232-25-0 Remove 1 Lip
6	202K232-25-0	204W511-25-0
8	202K232-25-0	202K232-25-0
12	202A142-25-0	202A132-25-0

* **These are recommendations only** based upon customers input. You can always check the sizes of each heat shrink boot listed on Prowireusa.com by searching the part number and looking at the sizes referenced in the pictures.

Raychem TE Shrink Boots For DTM Series Connectors

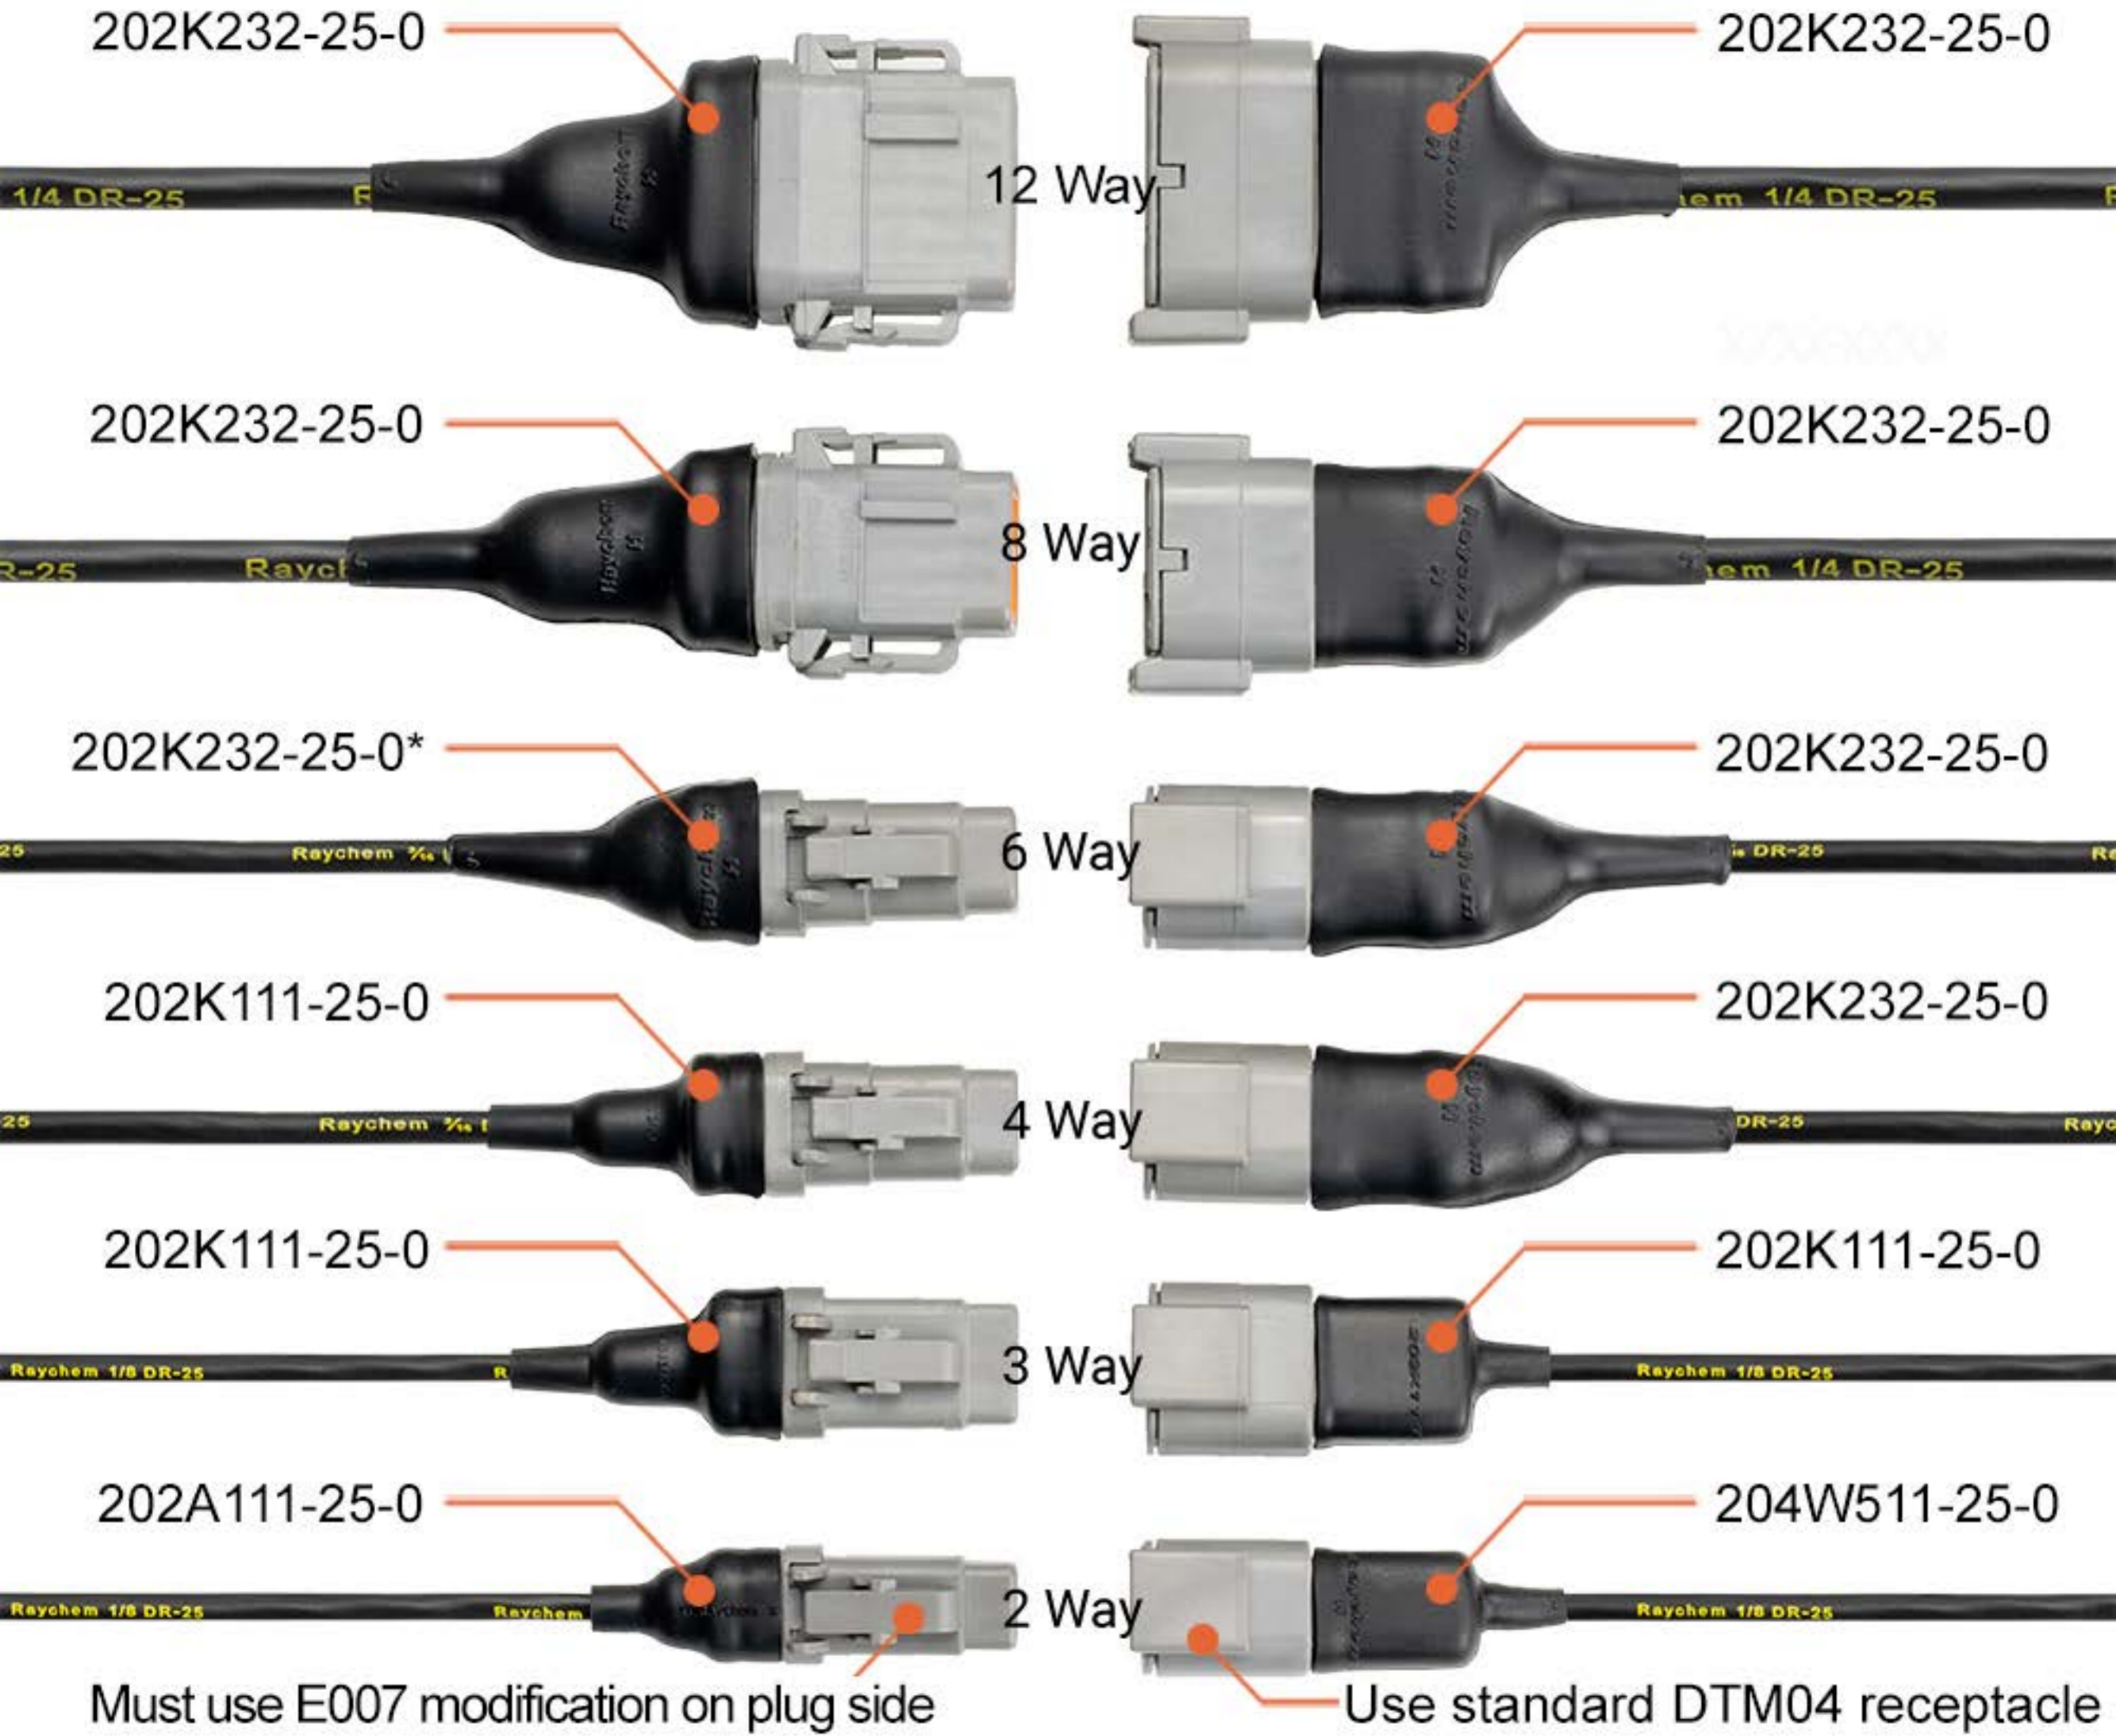

Raychem TE Shrink Boots For DT Series Connectors

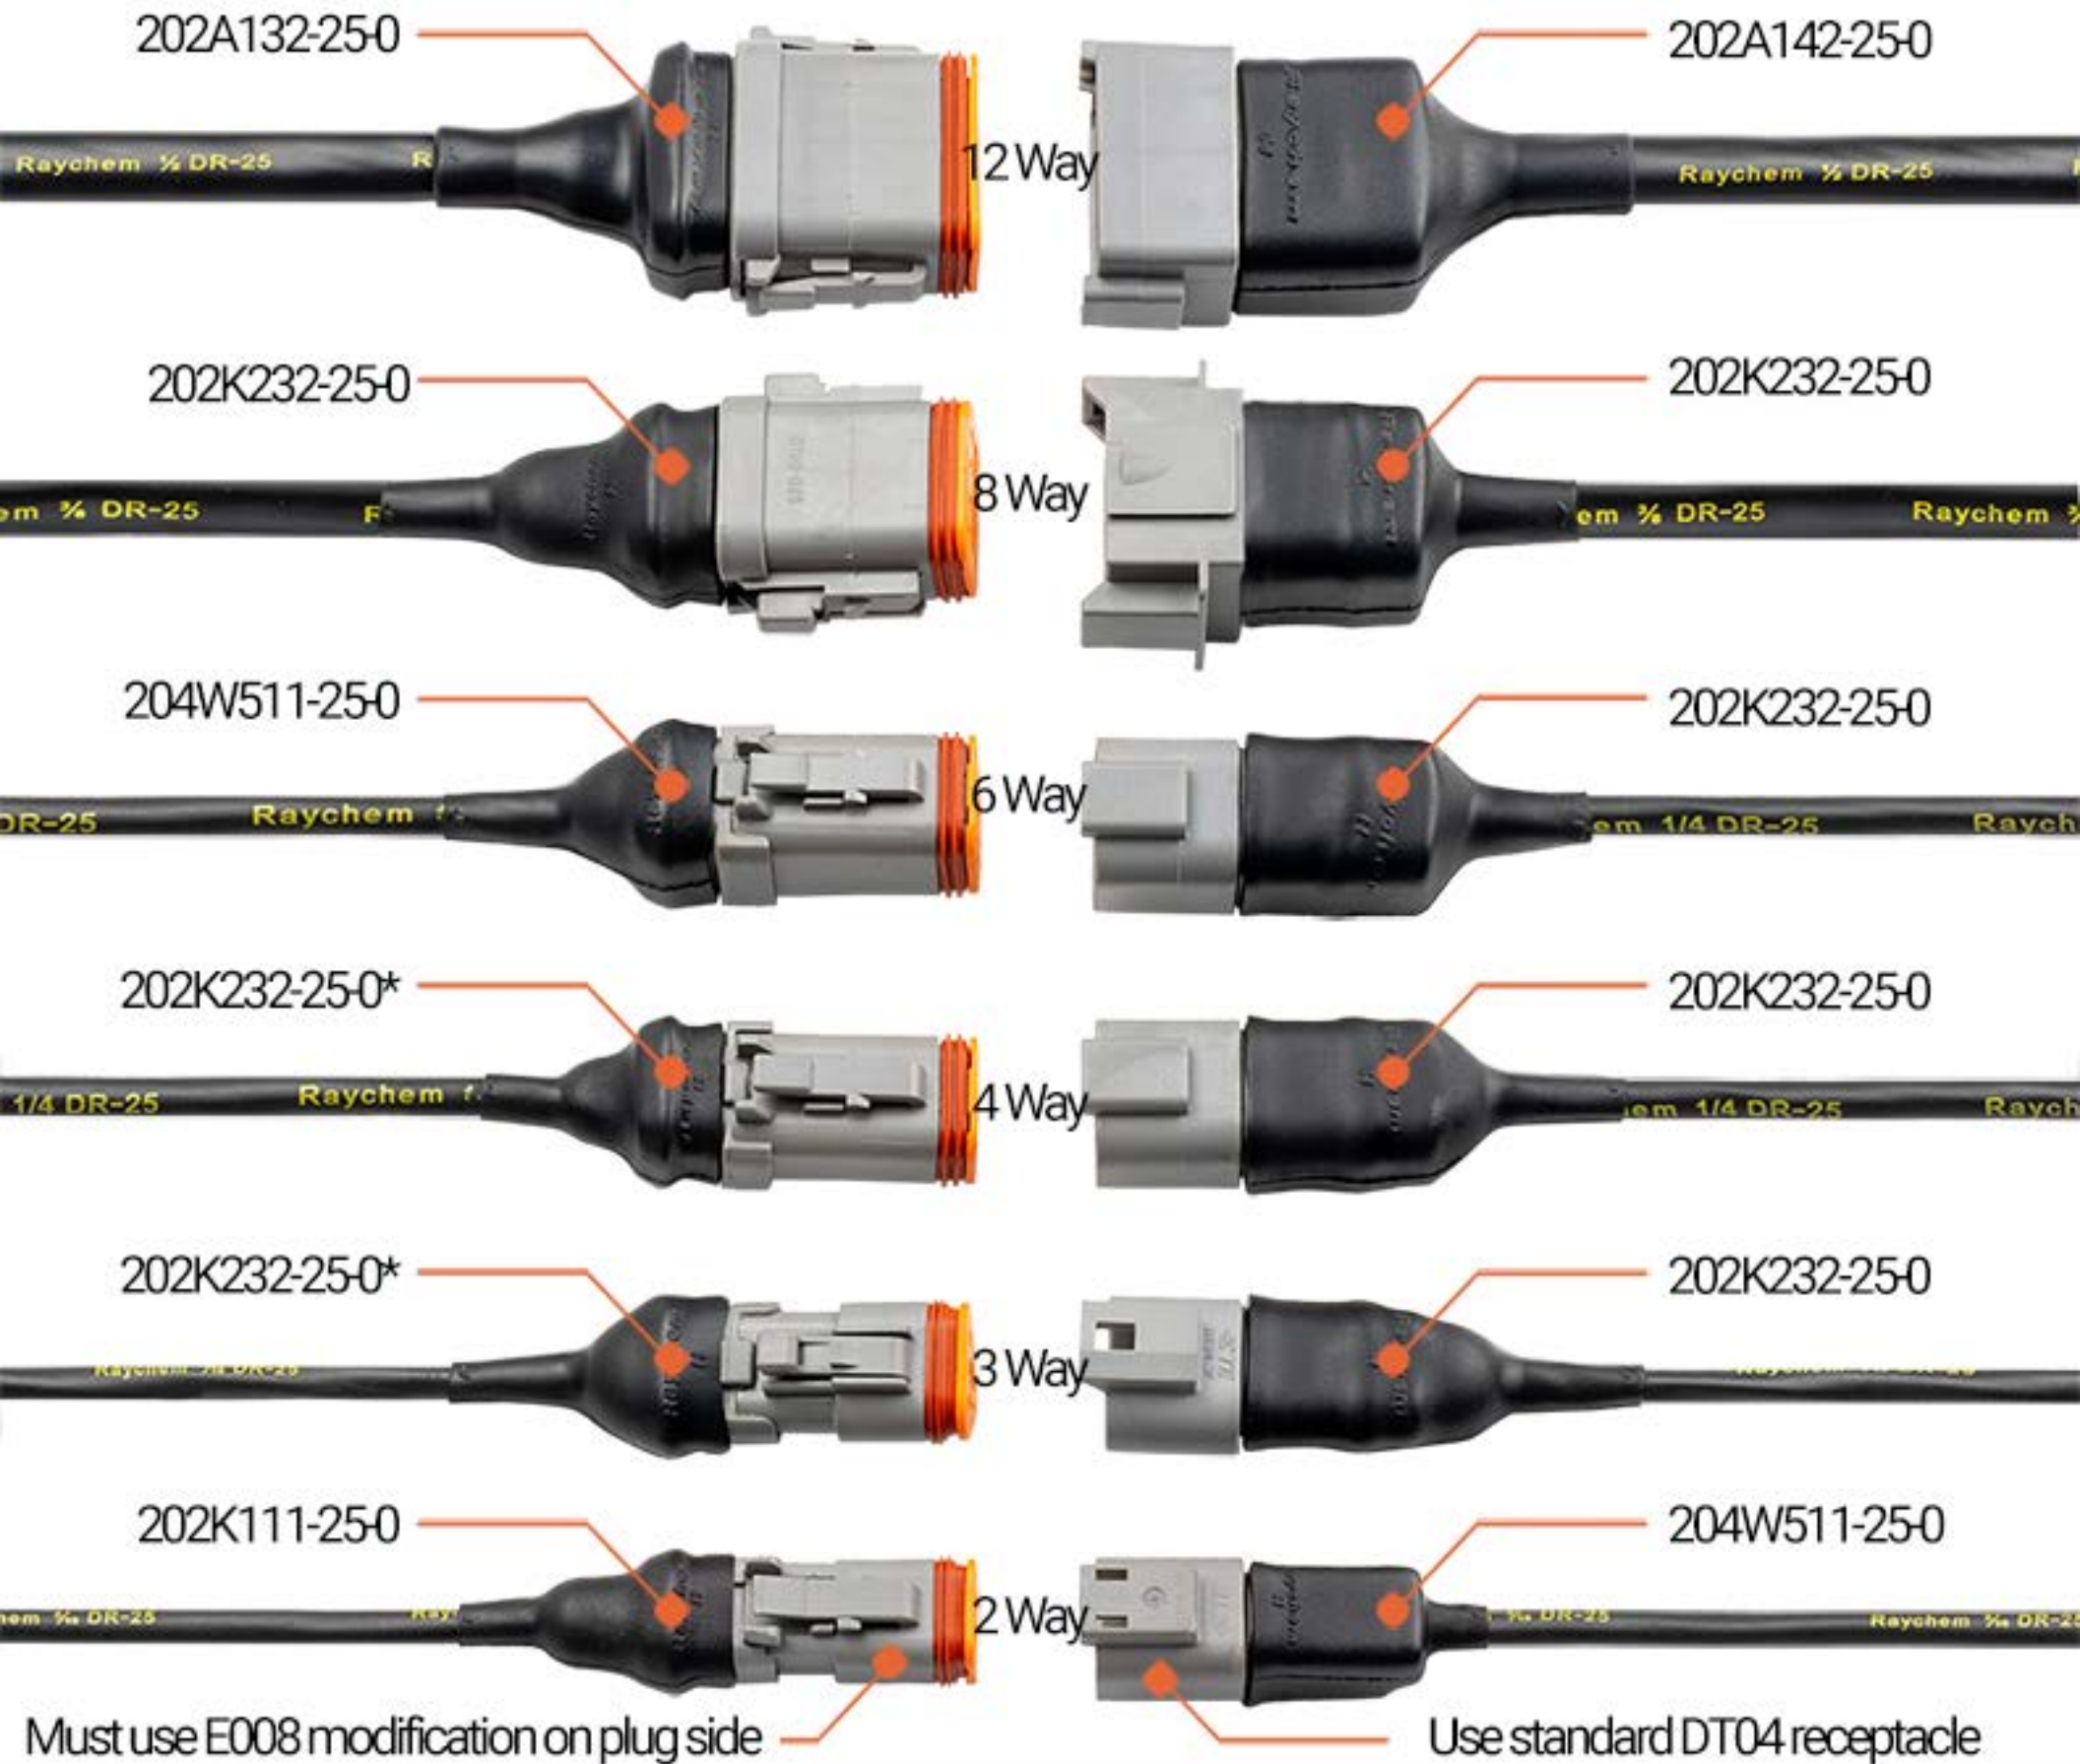

* Remove first lip of boot

SEARCH BOOT PART NUMBER ON PROWIREUSA.COM